

备注：四色印刷，157g铜版纸，90x154mm，R角5，正负公差0.5mm

Brand	Model Code	Brand	Model Code
LUXAIRE	0297	SUNDURG	0257.0505.1793.3841
MCCUAY	0234-0237.0465.0468.0472.0567.0587.2283.3820	SWAN	0434.0477.0516.0524.0946.1556
MI A/C	0391	TADIRAN	0246-0251.0591.2295.3833
MICOM	0415.1439.2463	TATUNG	0419.0420.1955.2979
MIDEA	0260-0265.0526.1284.2310	TCL	0246.0273-0281.0468.0476.0483.0534.0570.1298.3347
MISAKAE	0234-0237	TECO	0256.0473-0475.1280
MISTRAL	0237	TIANDI	0415.0927.1538.3999
MITSUBISHI	0001-0045.0476-0479.0522.0523.0552.0553.0568.0582.3828	TIANDI MICOM	0415.0131.0017
NEC NATIONAL	0138-0154.0200	TITANIUM	0339
NIKKO	0462.0519	TOSHIBA	0107-0117.0479.0489.0561.0562.1647.3181
NISO	0013.0016	TOYO	0002.0012
NORITZ	0431.1455.2468	TRANE	0227-0232.0512.0595.0739.2276
OGENERAL	0127-0137.0464.0552-0554	UNI-AIR	0222-0224.0450.3522
OTEC-OMEGA	0261.0307.0308.0359.0360.0482.0489.0505.0506.0512.0524.0610.1001	VIDEOCON	0002.0484
OMNI	0146.0262	VOITAS	0002.0197.0260.0261.0265.0498
PANASONIC	0138-0154.0483.0490-0492.2019.3738	WenBao	0138-0154.0483.0666.0995.1177
National	0378.0890.1405	WEATHERMAKER	0203-0209.0235.0458.0459.0468.0482.0486.0563-0565.0590-0592
PANDA	0210.0211.0487.0488.3795	WELLI	0393-0396.2442.3979
PHILCO	0210.0211.0487.0488.3795	Whippol	0164-0170.0481.0483.0502.0505.0506.2038.3752
PILOT	0591	WINIA	0481.0550.1505.3553
POLAR ICE	0571	XIL ENG	0411.0412.2490.3995
PROTON	0421-0423.2507.3593	XINLE	0297.0298.0400.0401.2960.3985
RAYBO	0362-0367.1387.2925	YANGZI(YAIR)	0403.1427.3475
RHOSS	0484	YINYAN	0258.0259.0330-0331.0326-0331.0478.0303.0394.0381.2888
ROWA	0369.0438.0439.0494.0527.0531.1975.3510	YORK	0107.0235.0238-0243.0468.0501-0502.0576.0573.0590-0592.2287.3312
Sabro	0435.0506-0508.2483.3579	YUETO	0002.0534
SACON	0002.0288	ZhenBao	0127-0137.0464.0639.1164.2176.3200
SAJO DENKI	0212-0215.1238.3285		
SAMPO	0424-0426.1448.1961.3497		
SAMSUNG	0188-0196.0516.0518.0700.1726.2239.3772		
SANYO	0046-0095.0529.0530.0558.0559.1090.3678		
SAST	0002.0012		
SASUKI	0254.0470.2006.3838		
SENSOR	0046.0071		
SHANGLING	0384-0388.0444.0445.3969		
SHANXING	0392.0449.1416.1985		
SHARP	0096-0106.0525.0542.1633.2150.2656		
SHENGFENG	0376.0480.1504.1912		
SHINCO	0351-0354.0454-0456.2912		
SHUAIKANG	0002.0288.0800.1311		
SHUANGLU	0376.0404-0407.0480.3476		
Skyworth	0359-0361.3728.3999		
SONGGE	0428.0429.1965.2988		
SOVA	0409.0410.2457.3482		
STARIGHT-AIRCON	0283		
STARWAY	0345-0350.0450.0453.0545-0546		
SUMMER	0427.1963.2485.3499		



www.ceto-controls.com



MADE IN P.C.R



www.ceto-controls.com



6 1974246133019 8

CETO<sup>®</sup>  
CONTROLS

UAR-409

UNIVERSAL  
A/C REMOTE



- 4000 IN 1
- Codes inputting
- Timer on/off
- Clock function

Remote



## Universal A/C remote user guide UAR-409

CETO<sup>®</sup>  
CONTROLS

### Product Description

Dear User:

Thanks for choosing CETO remote. Bring you more convenience is our best wish. UAR-409 is a universal remote with 4000 codes which is suitable for domestic/international kits, new/old models, constant frequency/inverter units, and can control 98% air conditioner all over the world. It contains timer on/off, digital keys input. Due to digital keys inputting which is our patent (patent NO.:ZL200810023186.7), even thousands codes, we only few seconds to finish the setting. So it is your best choice to update and replace the original remote. Please carefully read the instruction before setting to help you use it easily.

### Preparation

The remote control can be used after setting. Open the cover of battery, put 2 AAA (VM-4, R03) batteries as per polar indicated on the battery cabin.

### Patent coding set up

- Find out the codes that required from the code table. There are many groups' codes of each brand. Please try the first group, if it does not operate your device, try the second, and do like this until the codes can operate your equipment. Ex: AUCMA, you can choose 0288, if it does not work, please try the 0289etc.
- Press the SEL button for 1 seconds and release, the code on the LCD blinks once. Enter the 4 digit code in turn. EX: 0288, press the "0" button, "0" stop blinking, the last three number blinking, then press the "2" button, the last two number blinking, and press the "8" button, the last number blinking, finally press the last number "8", all of the 4 digit code "0288" stop blinking, code entry is complete now. The remote control confirm the code automatically, and then these numeric button get back original function normally. You can operate your air conditioner now.
- After your air conditioner on, try the other functions of your equipment. If do not operate your device. Please choose the next group of code until all the functions can work. The remote control is 4000 codes in one, so it is invalid when the code greater than 4000.

### Auto-search by one key

If you do not know the brand of your air conditioner, or if your brand is not listed in the code cable, try searching for your code as follow:

- Put the remote control aim at your air conditioner, press the "SEL" button for 5 seconds and release, the remote control is entering the auto-search status, launch the signal continuously, the code blinking and increasing. When the air conditioner receive the signal, and send a BUZZER, press any keys to confirm.
- After your air conditioner on, try the other functions of your equipment, if do not work, repeat these steps until it can operate your equipment.

### Clock set up

- Press the "CLOCK" button, clock signal is blinking.
- Press the "TIME+" "TIME-" of the time button, setting to the current time.
- Press the "CLOCK" button again, stop blinking, the time setting is complete.(If you did not press the "clock" button, it can be setting automatically after 5 seconds)

### TIMER ON

You can set timer on, only turning off your air conditioner.

- Press the "ON" button, the LCD displays the clock signal "🕒" and time blinking.
- Press "TIME+" "TIME-" button, adjust the time when you want to make the air conditioner turn on automatically.
- Time blinking and it will stop after 5 seconds. The LCD displays current "🕒" time and clock signal. Now setting is complete.

### TIMER OFF

You can set timer on, only after turning on your air conditioner.

- Press the "OFF" button, the LCD displays the clock signal "🕒" and time blinking.
- Press the "TIME+" or "TIME-" button; adjust the time when you want to make the air conditioner turn off automatically.
- Time blinking, and it will stop after 5 seconds. The LCD displays current time "🕒" and clock signal. Now setting is complete.

### Note

- If you press TIMER ON/OFF twice continuously, timer is deleted.
- After timer setting is finished, you should make the remote control's emit directs to your air conditioner's receiving location in available distance. If not, the settings deleted.
- If you want to see the timer, you should press the TIMER ON/OFF key, the LCD will display the time and after 5 seconds it will display current time.

### Attention

- If it is not used for a long time, remove the battery to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries.(New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set model code again.
- As usual the LCD only display the time when pressing model codes "Enter" button, you can find the code and it is showed on LCD. After 5 seconds it returns time.
- Check carefully that there is no remora between remote controller and Air conditioner when the time on/off doesn't work. Because the operation is effective only when the air conditioner receives the time on/off signal from remote controller.
- The manufacturer keeps the right to change the parameter and function of product.

### Technical Parameters

Controllable distance: Large than 8 meters  
Battery model: Battery AAA(UM-4, R03) \*2  
Weight: Approx.45g(excl. the batteries)

Power supply voltage: DC3V  
Dimension: L123mm \* W44mm \* D22mm

★ The final explanatory right is reserved this company. Any alteration on the design and model will not be further notified.

OMEGA<sup>®</sup>  
ENVIRONMENTAL  
TECHNOLOGIES LLC.  
17702 Mitchell North, #101  
Irvine, CA. 92614, USA  
Tel: 714 795 2830  
Fax: 954 212 8280  
info@otecomega.com  
wwwotecomega.com

CETO<sup>®</sup>  
CONTROLS CO.  
Showroom & Technology Center  
11380 Interchange Circle North  
Miramar, Florida, 33025 USA  
Tel: 888 840 7550, 954 715 5006  
Fax: 954 212 8280  
info@ceto-controls.com  
www.ceto-controls.com

